



## TH141

This stylish thermostat features automatic changeover between heating and cooling



 [Print this page](#)

### MODEL & RATINGS

TH141HC-28      1.5 A @ 24 V      2-, 3-, 4- or 5-wire installation (Rh, W, Rc, Y, G)

### SPECIFICATIONS

#### TEMPERATURE CONTROL

PROPORTIONAL ADAPTIVE  
Cycles: selectable 5, 10, 15 or 20 min.  
CONVENTIONAL WITH ANTICIPATION  
Programmable temp. span:  $\pm 0.3^{\circ}\text{C}$  ( $0.5^{\circ}\text{F}$ )  
to  $\pm 0.6^{\circ}\text{C}$  ( $1.1^{\circ}\text{F}$ )

#### PROGRAMMING

7-day, up to 4 time periods, 2 temps. / day  
Selectable 12- or 24-hour format,  $^{\circ}\text{C}$  or  $^{\circ}\text{F}$

#### POWER SUPPLY

2 AA batteries

#### DIMENSIONS (H•W•D)

126 x 97 x 26 mm / 4.9 x 3.8 x 1 in.

### FEATURES

**Selectable temperature control** – gives thermostat flexibility to control a range of heating/cooling systems and applications

**Automatic changeover** between heating and cooling

**Auto/manual fan control**

**Comfort, economy and vacation presets** – enable temperature changes at the touch of a button

**Armchair programming** – convenient programming by removing faceplate from base

**Precise LCD** – shows room temperature in increments of  $0.1^{\circ}\text{C}$  or  $0.1^{\circ}\text{F}$

**Low battery indicator** – gives 60 days warning to replace batteries

**Remote input** enables change of temperature modes from phone (Aube telephone controller required) or alarm/automation system (12 VDC transformer required)

### ACCESSORIES

Aube CT240 telephone controller

### INSTRUCTION MANUAL

 [TH141HC-28.PDF](#) (format PDF)



To view a PDF, you must have Acrobat Reader.  
Click on the icon to download it for free.

## WARRANTY

