



TH115 Series

Packed with advanced programming features, this thermostat can control a room's ambient temperature using the floor heating system



 [Print this page](#)

MODELS & RATINGS

TH115-AF-120S	2000 W @ 120 V	16.7 A resistive	60 Hz	4 wires / SPST
TH115-AF-240D	3600 W @ 240 V	15 A resistive	60 Hz	4 wires / DPST
TH115-AF-240S	4000 W @ 240 V	16.7 A resistive	60 Hz	4 wires / SPST

Includes 15 ft. / 4.6 m sensor

SPECIFICATIONS

TEMPERATURE CONTROL

Microprocessor-optimized PIA
Heating cycles: 15 minutes
Accuracy: $\pm 0.5^{\circ}\text{C}$ / 0.9°F

SWITCHING ACTION

Epoxy-soundproofed relay: Quiet operation

PROGRAMMING

7-day, 4 time periods/day, 2 temp. settings
Pre-programmed or personalized schedule
Early Start function
Selectable 12- or 24-hour format / $^{\circ}\text{C}$ or $^{\circ}\text{F}$

DIMENSIONS (H•W•D)

124 x 70 x 23 mm / 4.9 x 2.8 x 0.9 inches
Floor sensor: 4.6 m / 15 feet

FEATURES

AF mode controls ambient temperature with floor temperature limitation

Two temperature sensors - one in floor, one in thermostat for accuracy and security

Advanced temperature control ensures total comfort by minimizing temperature variations

Advanced temperature control ensures total comfort by minimizing temperature variations

ON/STANDBY switch enables thermostat shutdown at end of heating season for added security

Remote input works with phone or alarm system (telephone controller required)


Battery-free backup means no re-programming your schedule after power outage

ACCESSORIES

Aube AC112-01 North American floor sensor, 15 ft. / 4.6 m
Aube AC112-01 North American floor sensor, 50 ft. / 15 m
Aube CT240 telephone controller
Aube CT241 telephone controller

INSTRUCTION MANUAL

 [TH115-AF S D.pdf](#) (format PDF)

 To view a PDF, you must have Acrobat Reader. Click on the icon to download it for free.

CERTIFICATION



WARRANTY

3 year
warranty